ARAT Telephone mount

Type: PEUGEOT, 406
1996 – 99 model

Part No: 1232

ARAT GmbH
Spezialhalterungen
für Autotelefone u.-Navigationssysteme

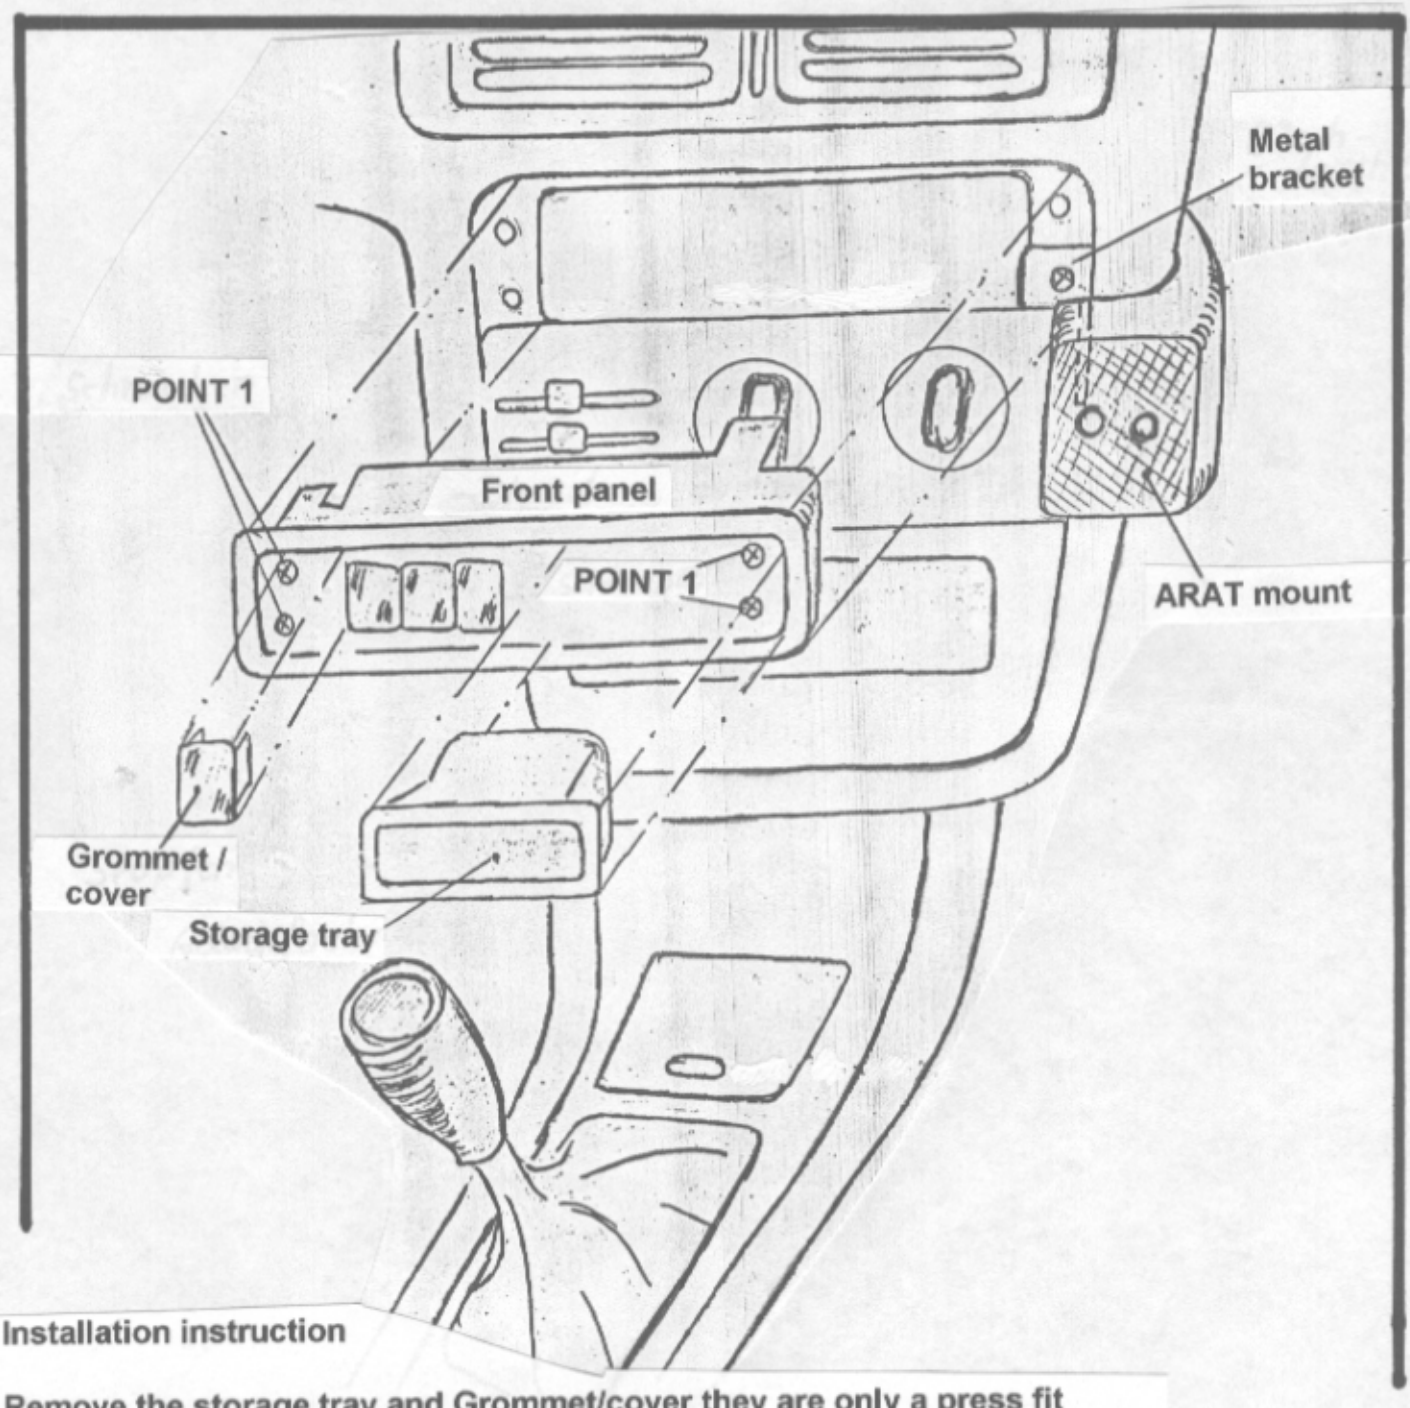

Installation instruction

1. Remove the storage tray and Grommet/cover they are only a press fit
2. Remove the screws (x4) at POINT 1, and remove the front panel
3. Place the ARAT mount to the contours of the dashboard, ensuring that the holeress the spring clips, in the radio housing and pull the front panel approx 10 Cm forward
4. Remove the screw at POINT 2
5. Place the ARAT mount to the contours of the dashboard, and secure it through the metal bracket, with the screw at POINT 2
6. Replace the front panel press the panel back into the spring clips, and replace the screws at POINT 1, replace the ashtray and radio